

USER INFORMATION SHEET

COURIER MUFFS

Oxford Courier Muffs are a universal product for all bikes, designed to fit most handle bars up to 22mm in diameter.

Oxford Courier Muffs are made from water-resistant neoprene fabric with bonded seams, keeping hands warm and dry. An adjustable windproof wrist protector can also be tightened (if required) around the jacket sleeves or gloves for extra wind protection.

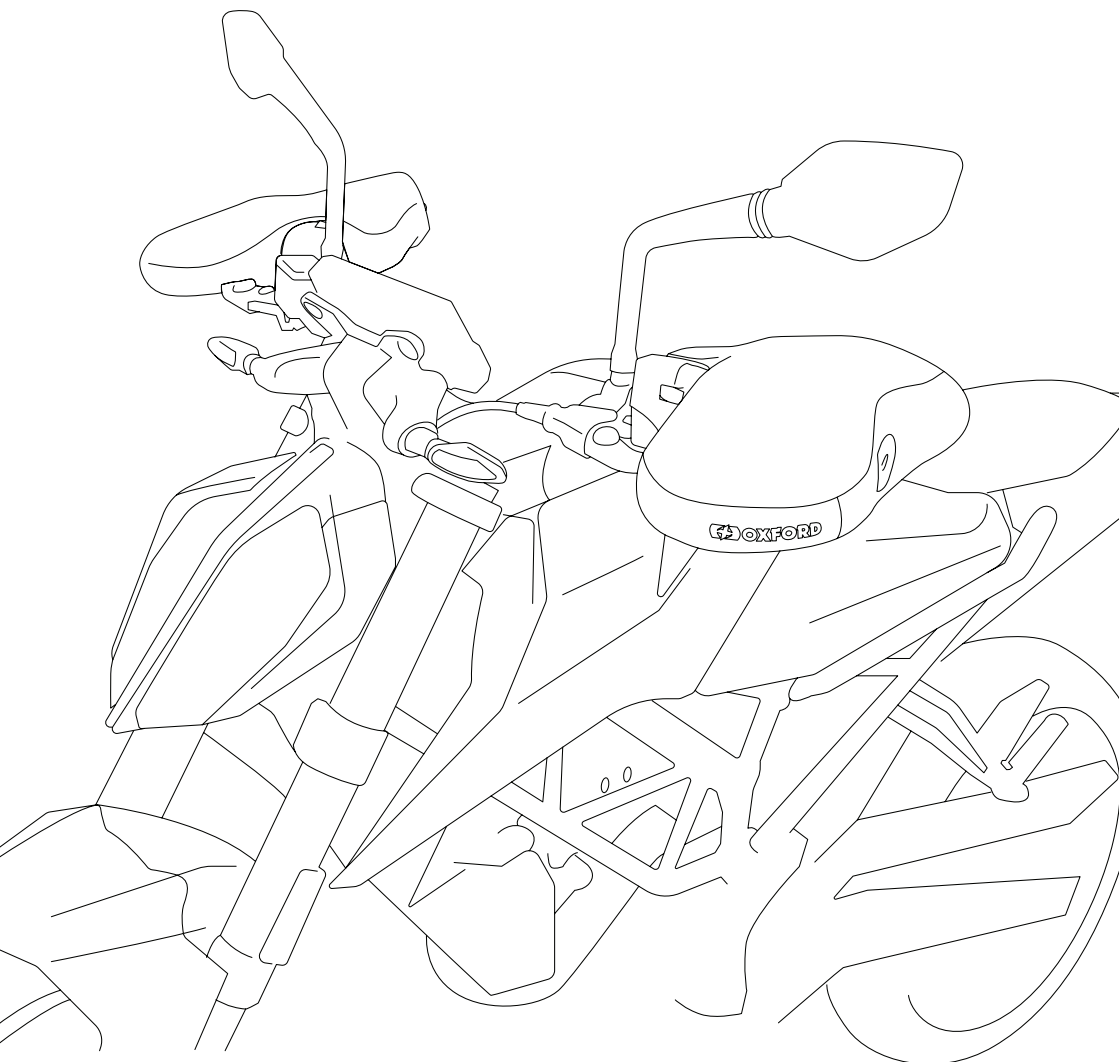


OX392 - COURIER MUFFS

BAR END FITTING INSTRUCTIONS


If you want to further secure the Courier Muffs into place, use OX598 - OXFORD Bar-End.

CONTENTS


- A** Bar-end
- B** M8 bolt
- C** Small expansion bushing
- D** Large expansion bushing
- E** Bar-end cone

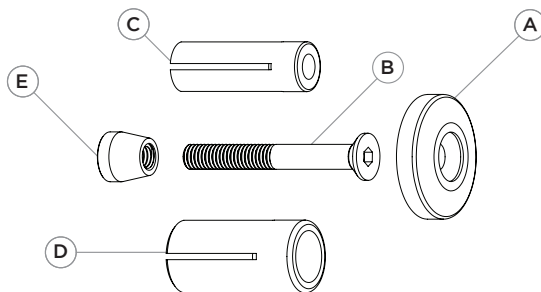


- 1** Insert Bolt (B) and Bar-End (A) into the Courier Muff.

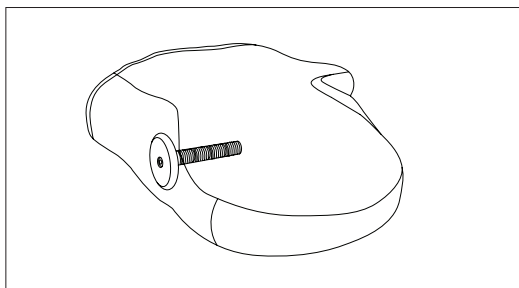

- 2** Slide Bar-End inner expansion bushing (C) onto the bolt followed by threading on the Bar-End cone (E). Use additional expansion bushing (D) if needed.

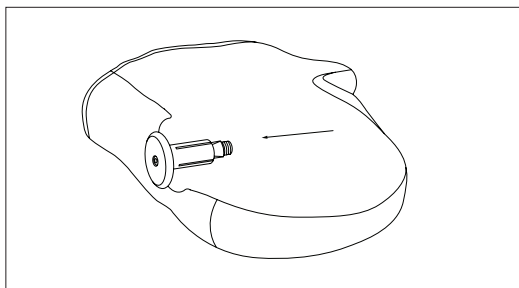

- 3** Insert complete Bar-End assembly into the handlebar and tighten bolt ensuring the inside of the Courier Muff doesn't foul on the throttle grip.

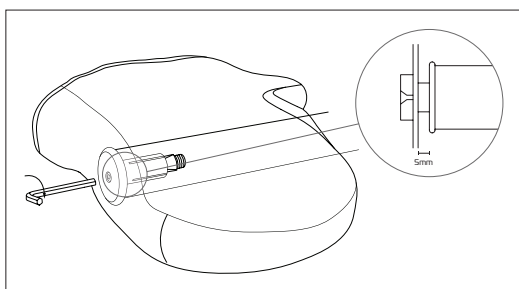


GB - OX392 - COURIER MUFFS

CLIC GRIP™ FITTING INSTRUCTIONS


If Courier Muffs are being fitted to the Courier Hotgrips™ follow steps 1-4.
If NOT skip steps 1 & 3.

CONTENTS


- A** COURIER MUFF x2
- B** CLIC GRIP™ COLLAR x2

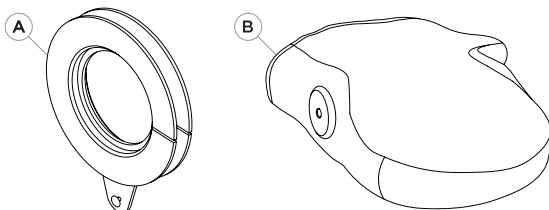


- 1** Ensure that the CLIC GRIP™ COLLAR (A) has been attached to the COURIER MUFF (B).

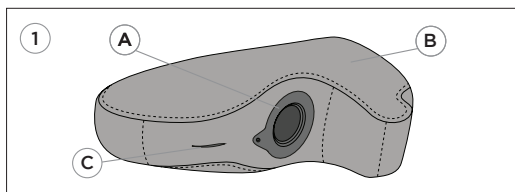


- 2** Slide the Courier Muff over the handlebar grip, ensuring the brake/ clutch lever goes through the slit (C). - If necessary, make the slit larger to suit your motorcycle.

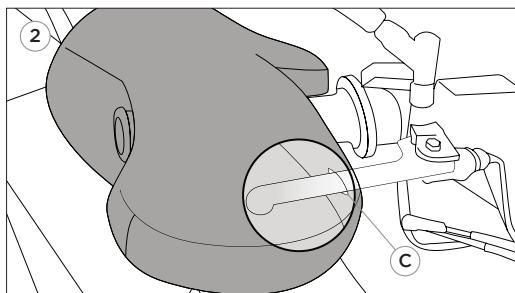

- 3** 'CLIC' the CLIC GRIP™ Collar into the channel of the COURIER HOTGRIP™.

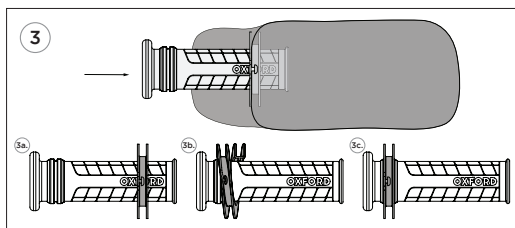

- 4** Check Courier Muff is securely fitted before riding

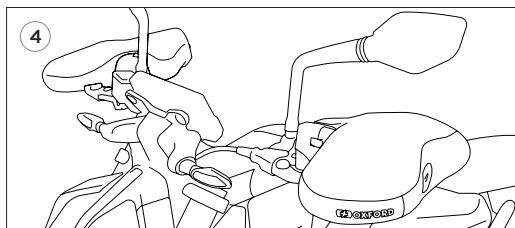

WARNING

YOUR SAFETY IS YOUR RESPONSIBILITY.

CHECK all parts are intact and securely fitted before **EVERY** journey

DO NOT RIDE if controls and throttle feel restricted when Oxford Courier Muffs are mounted – Check to ensure Oxford Courier Muffs are fitted correctly

CHECK throttle returns independently once muff is fitted into place onto the Bar-end fixing

Oxford Courier Muffs are designed for use at UK road legal speeds.

 **OXFORD**
Oxford Products Ltd

UK: Witney, Oxon, OX29 0YG
EU: 40212 Duesseldorf, Germany

www.oxfordproducts.com

 /oxfordproductsltd

 /oxfordproductsltd

 @oxfordproducts


GR - OX392 - ΜΑΝΣΟΝ COURIER

ΟΔΗΓΙΕΣ ΤΟΠΟΘΕΤΗΣΗΣ CLIC GRIP™


Εάν τα Μανσόν Courier τοποθετούνται στα Courier Hotgrips™, ακολουθήστε τα βήματα 1-4.
Εάν ΟΧΙ, παραλείψτε τα βήματα 1 και 3.

ΠΕΡΙΕΧΟΜΕΝΑ


- A** ΜΑΝΣΟΝ COURIER x2
- B** ΚΟΛΑΡΟ CLIC GRIP x2

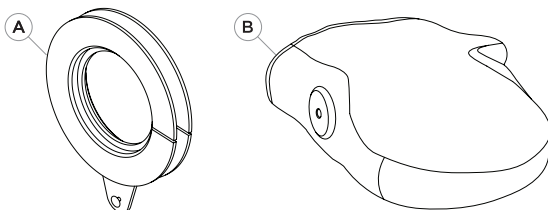


- 1** Βεβαιωθείτε ότι το ΚΟΛΑΡΟ CLIC GRIP™ (A) έχει προσαρτηθεί στο ΜΑΝΣΟΝ COURIER (B).

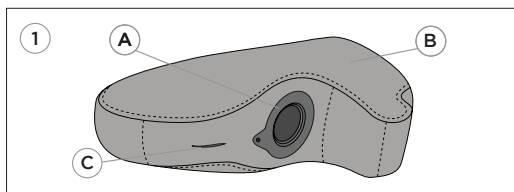


- 2** Περάστε το Μανσόν Courier επάνω από το γκριπ του τιμονιού, διασφαλίζοντας ότι ο μοχλός του φρένου/συμπλέκτη θα περάσει μέσα από τη σχισμή (C). - Εάν χρειάζεται, μεγαλώστε τη σχισμή ανάλογα με τη μοτοσικλέτα σας.

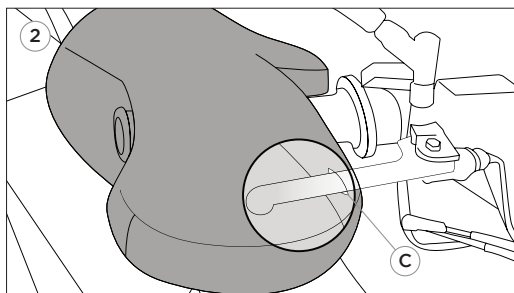

- 3** «ΚΟΥΜΠΩΣΤΕ» το Κολάρο CLIC GRIP™ μέσα στο κανάλι του COURIER HOTGRIP™.

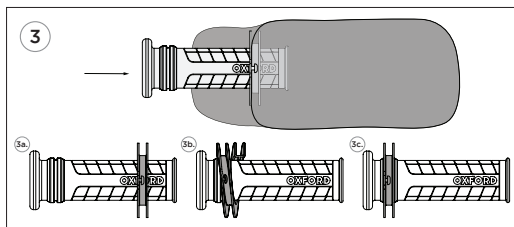

- 4** Ελέγξτε εάν το Μανσόν Courier εφαρμόζει με ασφάλεια πριν την ανάβαση.

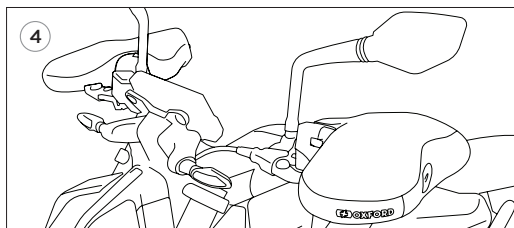


OX392 - ΜΑΝΣΟΝ COURIER

ΟΔΗΓΙΕΣ ΤΟΠΟΘΕΤΗΣΗΣ ΣΤΟ ΑΚΡΟ ΤΙΜΟΝΙΟΥ


Εάν θέλετε να στερεώσετε περαιτέρω τα Μανσόν Courier στη θέση τους, χρησιμοποιήστε το OX598 – Άκρο τιμονιού OXFORD.

ΠΕΡΙΕΧΟΜΕΝΑ


- A** Άκρο τιμονιού
- B** Βίδα M8
- C** Μικρή ροδέλα επέκτασης
- D** Μεγάλη ροδέλα επέκτασης
- E** Κώνος άκρου τιμονιού

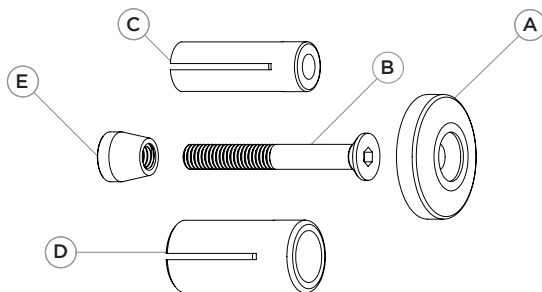


- 1** Εισαγάγετε τη βίδα (B) και το άκρο τιμονιού (A) στο Μανσόν Courier.

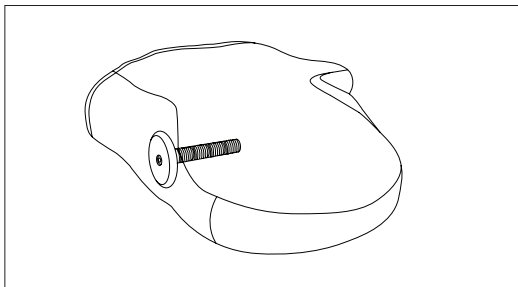

- 2** Ωθήστε την εσωτερική ροδέλα επέκτασης (C) του άκρου τιμονιού επάνω στη βίδα, ακολουθούμενη από βίδωμα στον κώνο άκρου τιμονιού (E). Εάν χρειάζεται, χρησιμοποιήστε πρόσθετη ροδέλα επέκτασης (D).

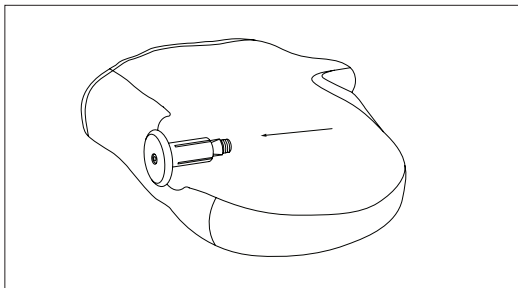

- 3** Εισαγάγετε ολόκληρο το συγκρότημα του άκρου τιμονιού στο τιμόνι και σφίξτε τη βίδα, διασφαλίζοντας ότι το άκρο του Μανσόν Courier δεν έχει ρυπανθεί επάνω στο γκριπ του γκαζιού.

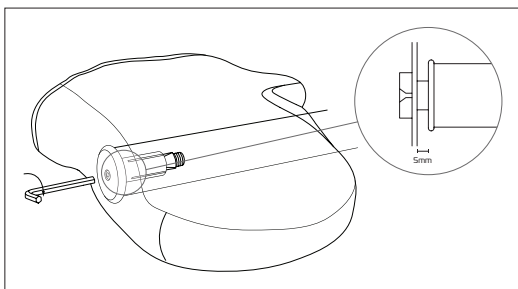

ΠΡΟΕΙΔΟΠΟΙΗΣΗ

Η ΑΣΦΑΛΕΙΑ ΣΑΣ ΕΙΝΑΙ ΔΙΚΗ ΣΑΣ ΕΥΘΥΝΗ.

Πριν από **ΚΑΘΕ** διαδρομή, **ΕΛΕΓΧΕΤΕ** ότι όλα τα εξαρτήματα είναι ακέραια και σωστά τοποθετημένα

ΜΗΝ ΟΔΗΓΗΣΕΤΕ εάν έχετε την αίσθηση ότι τα χειριστήρια και το γκάζι περιορίζονται όταν τοποθετηθούν τα Μανσόν Oxford Courier – Ελέγξτε ότι τα Μανσόν Oxford Courier έχουν τοποθετηθεί σωστά

ΕΛΕΓΞΤΕ ότι το γκάζι επιστρέφει ανεξάρτητα αφού τοποθετηθεί στη θέση του το μανσόν στο εξάρτημα στερέωσης άκρου τιμονιού

Τα Μανσόν Oxford Courier έχουν σχεδιαστεί για χρήση στα νόμιμα όρια ταχύτητας οδικής κυκλοφορίας για το Ηνωμένο Βασίλειο.

 **OXFORD**
Oxford Products Ltd

UK: Witney, Oxon, OX29 0YG
EU: 40212 Duesseldorf, Germany

www.oxfordproducts.com

 /oxfordproductsltd

 /oxfordproductsltd

 @oxfordproducts